



Description

MAINTENANCE CART OVERVIEW

P/N	Product	Description
TV116355	Maintenance Cart	<ul style="list-style-type: none">• Dimensions: 1.04m x 0.64m x 0.90m (40.8" x 25.0" x 36.3")• Weight: 40 kg (88 lbs)• User manual
TV118395	Gas Bottle Bracket	Bracket with strap, bumpers and hardware

The TITAN VERSA Maintenance Cart is designed to carry one TITAN VERSA leak detector unit, one additional backing pump, and small tools or parts that fit within the attached drawer. With the gas bottle accessory, it may also be used to carry one standard size gas cylinder (T, K, S, Q) on front of cart.

Transport and Storage

- ➔ When shipping or transporting cart, ensure cart is raised so that the wheels and casters bear no weight. Ensure drawer is empty and either removed from cart or closed and secured.

Safety




WARNING:


- The TITAN VERSA Maintenance Cart is only to be used with a TITAN VERSA Leak Detector as outlined in the manual
- You must install, operate, and service the device only in compliance with these operating instructions
- The device was built according to recognized state-of-the-art safety regulations. Nevertheless, improper use can result in danger to life and limb of the operator or other persons and damage to the device and other property
- Always use two people to lift cart

Installation


If the cart is purchased separately from the leak detector, the user must install the leak detector onto the frame using these instructions. Ensure the leak detector is mounted to the cart using the provided 4x M6 screws and 4x M6 washers.

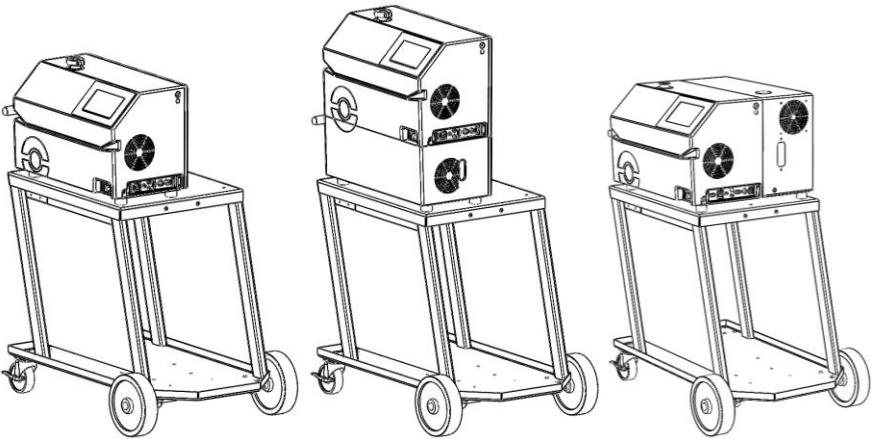

Mounting position for Compact or Tower configurations.

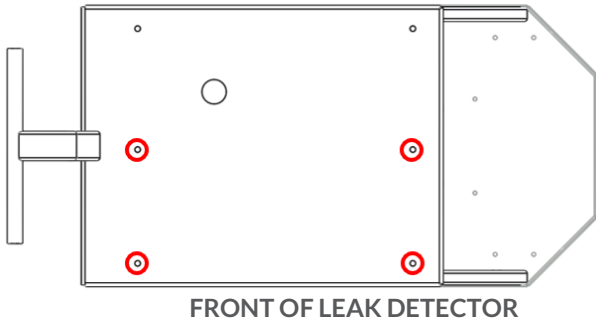


Mounting position for Horizontal configuration.

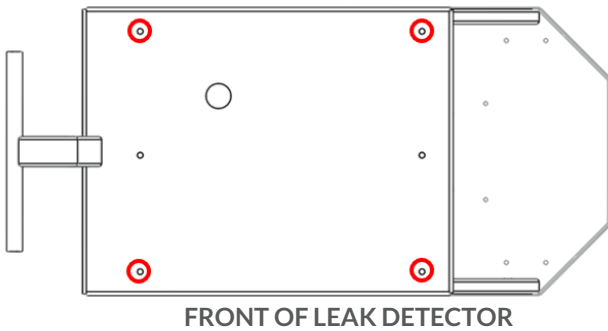


Gas Bottle Installation

If gas bottle is purchased separately from cart, use assembly instructions below to attach gas bottle kit. Gas Bottle Attachment Kit includes front bottle bracket, cinching strap, rubber bumpers, and attachment hardware.

- ➔ Place strap through bracket, then attach bracket to cart using 2x M6 screws and 2x M6 washers.

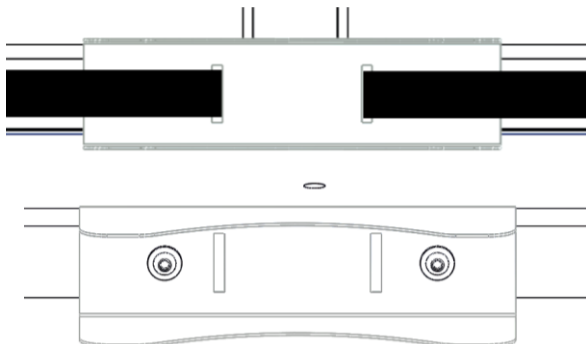

- Attach rubber bumpers to base of cart using 2x lock washers and 2x M6 nuts.

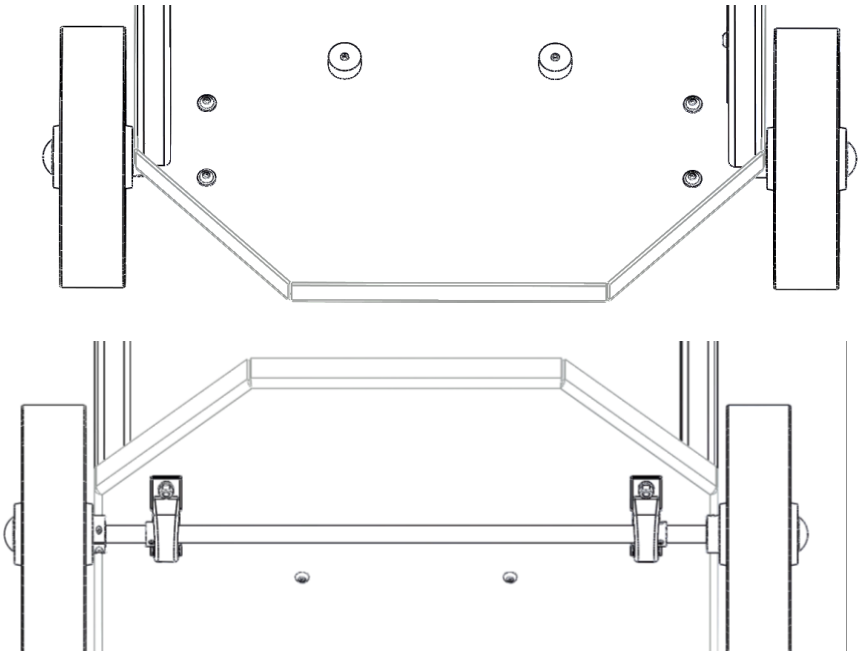

Operation

Always lock wheels before using or adjusting leak detector or pump. Do not move the cart when the leak detector is in operation. Cart may be moved five minutes after leak detector has been turned off.

Maintenance and Accessories

MAINTENANCE CART ACCESSORIES AND SPARE PARTS	
P/N	Description
TV118395	Gas Bottle Attachment Kit /Assembly
LMSA5923	Replacement Casters
LMSA5924	Replacement Wheels